



Getting Started in 4 Steps!

GPower SmartUI for TestStand


- 1) Installation – Install the GPower SmartUI NI package using NI Package Manager (Supports TestStand 2024 and newer).
 - a. For additional functionality install the GPower Smart Flow and SmartUI LV and TS toolkits using NI Package Manager.
- 2) Setting up TestStand – Before using SmartUI, open TestStand and enable the “Version Independent Runtime Engine” flag under Configure -> Adapters -> LabVIEW [Configure...].

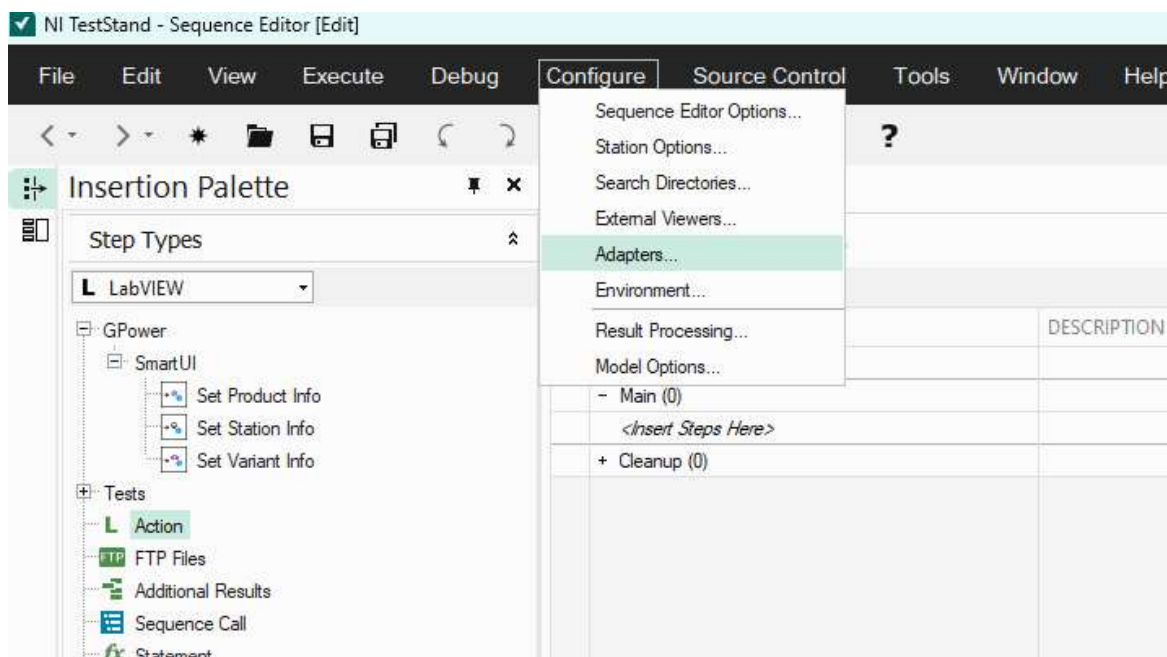

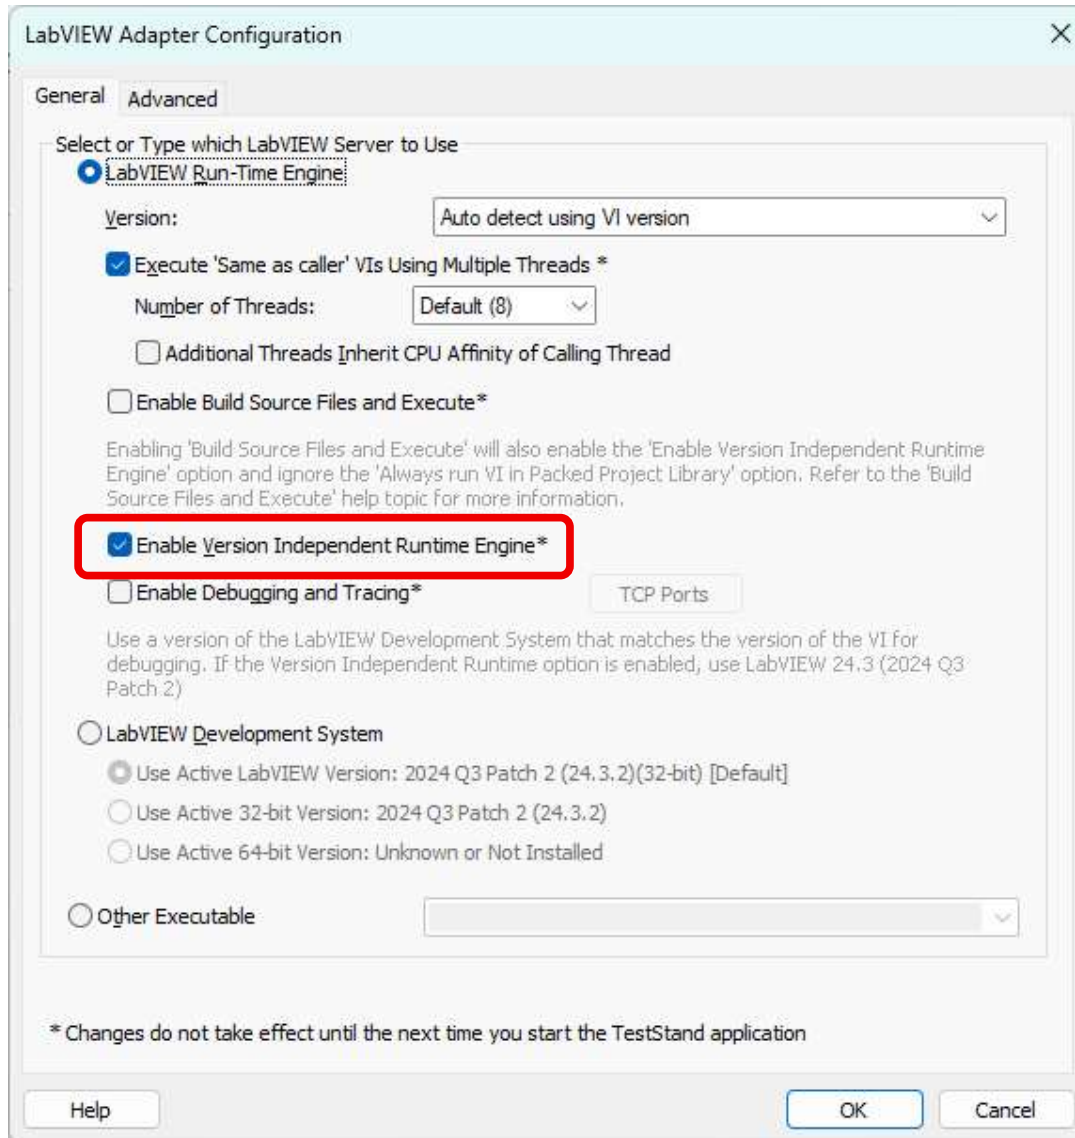



3) First time running SmartUI

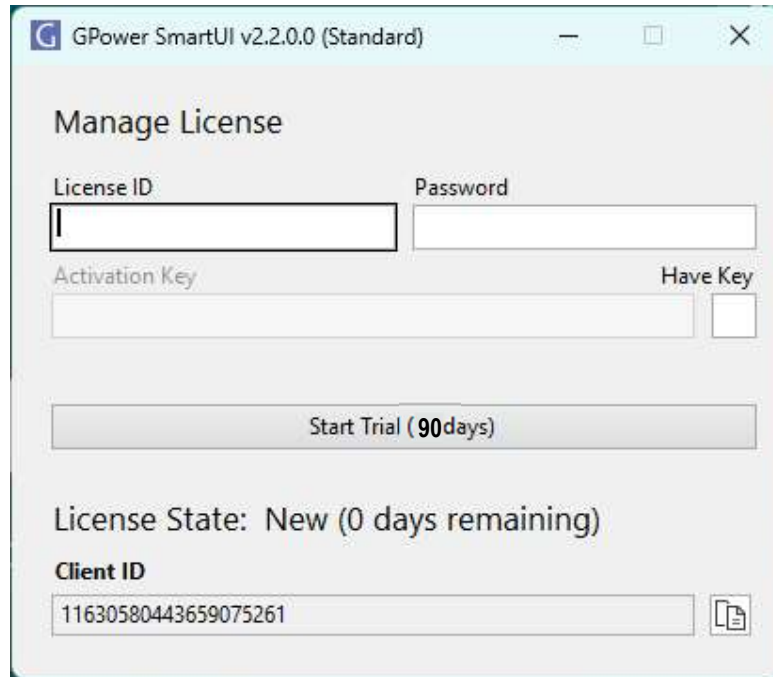First time running SmartUI, the user will be prompted to activate the license. Follow onscreen instructions to activate. A 90-day trial period can be activated.



4) Opening and executing TestStand sequences –

Click  -> Browse to select a TestStand sequence file to open.

Select the sequence you want to run (highlighted with a black outline) and press the start button,  and then press “Start”.